



OFFFC Education



Wader

And

Float Tube

Repair

Finding the leak

- Turn waders inside out
- Spray rubbing alcohol over the inside
- Where the spray spots change color is where there is a hole



Sealing the leaks

Mark the dark spots with a permanent marker. When the fabric is dry, put some Aquaseal on the leak, let set for 12 hours



Or you can take them into a dark room; shine a flashlight inside them and see where the pinpoints of light occur. Mark those points with a marking pen and patch with Aquaseal

Gore-Tex Patches

You can also use
Gore-Tex patches
with the Aquaseal
if it's a large hole



Loon UV Wader Cure

- If you need a fast fix for a pin hole, you can use Loon UV Cure.
- Make sure you use indoors or shaded from the sun, apply enough UV Wader repair to coat damaged area, as well as the area around each hole.
- Expose to sun light or use Loon's UV Mini Lamp or UV Power Light to cure. In direct sun (or when using Loon's UV Lights) hardening should take approximately 15 seconds.



Neoprene repair

CARTRIDGE PREPARATION



PUNCTURE REPAIR




SEAM REPAIR



For Neoprene
waders use
SG20

Float Tube Repair

- Use soapy water and sponge over suspected area
- Wipe clean and then apply Aquaseal around affected area
- Let dry for 12 hours

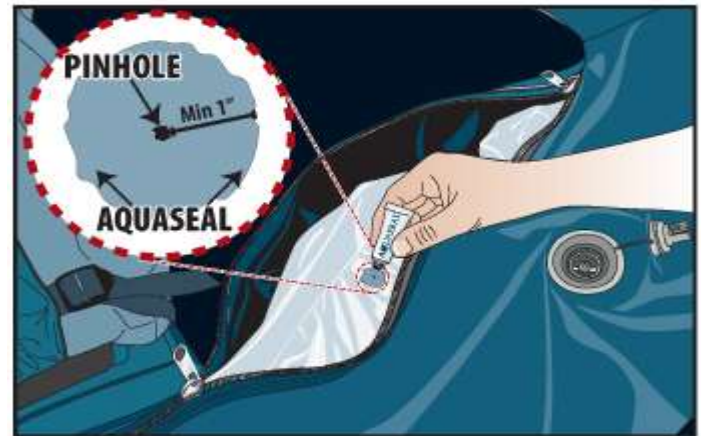


Float Tube Repair Kits

- Outcast (and other float tube manufacturers sell float tube repair kits



Loon UV Boat Cure

- Determine location of leak in boat/float tube (Rub soapy water over suspected area. Bubbles will appear above leak). While indoors or shaded from the sun, apply enough UV Boat repair to coat damaged area, as well as the area around each hole. Expose to sun light or use Loon's UV Mini Lamp or UV Power Light to cure. In direct sun (or when using Loon's UV Lights) hardening should take approximately 15 second

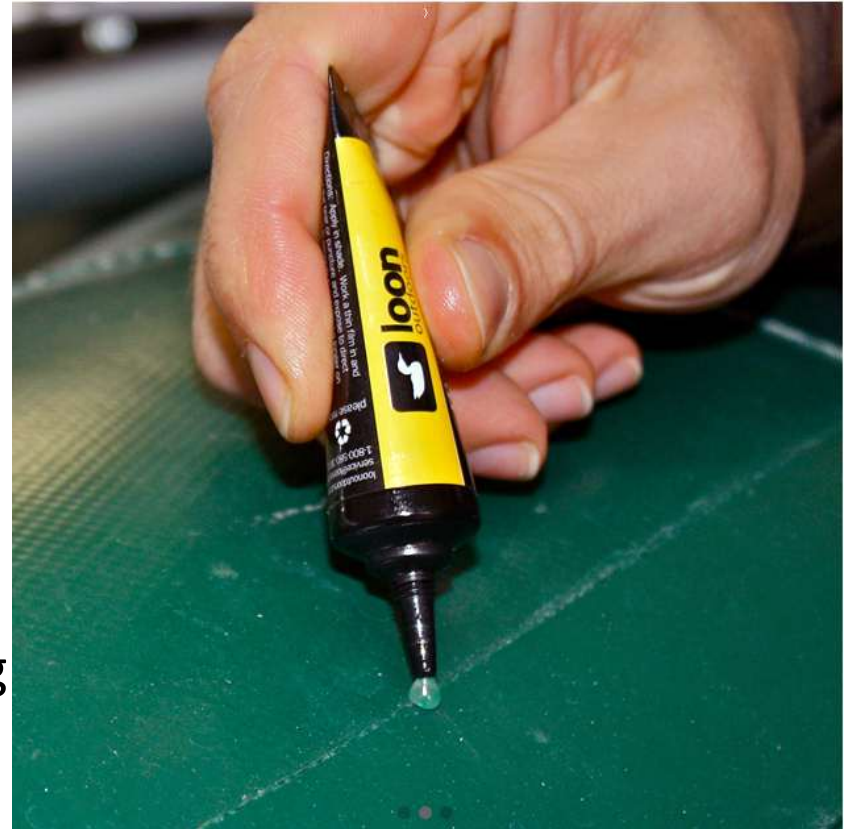

Repair Tape

- Use Tear-Aid for quick fixes
- Make sure you use Tear-Aid type B for Vinyl Repair (type A is for fabric).
- Tenacious Tape will also work

